
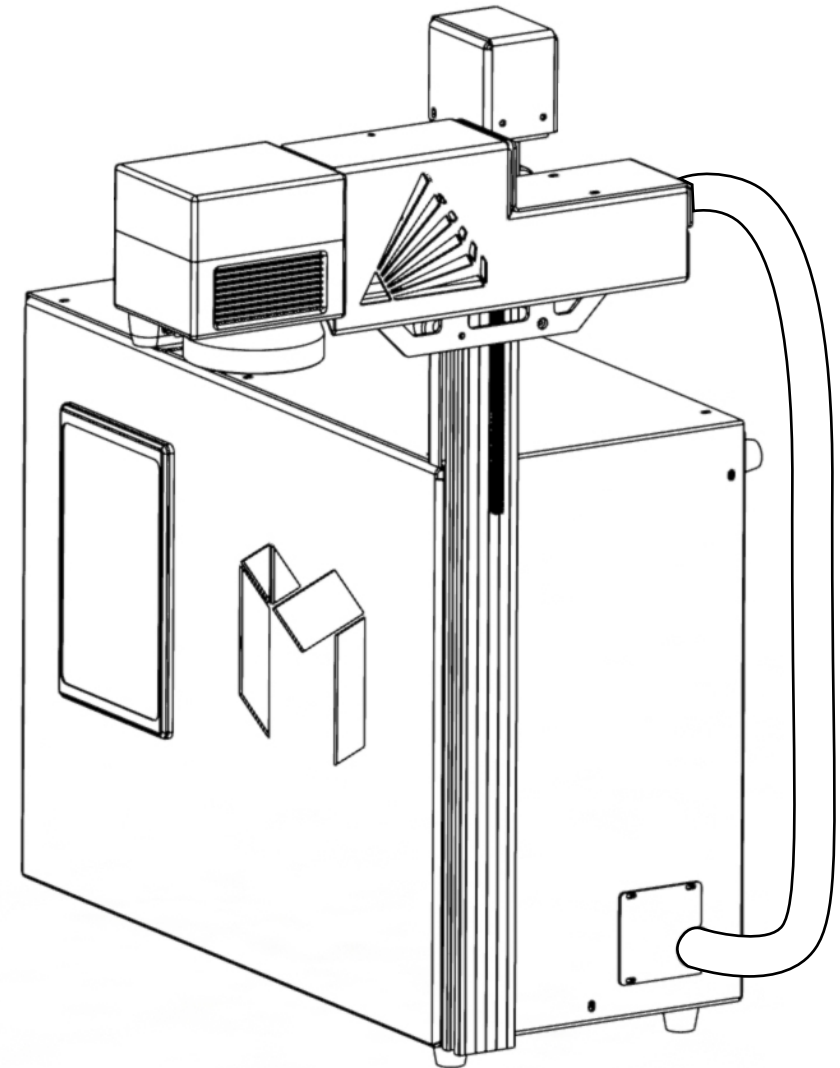


MUSE GALVO

LASER HEAD ASSEMBLY INSTRUCTIONS

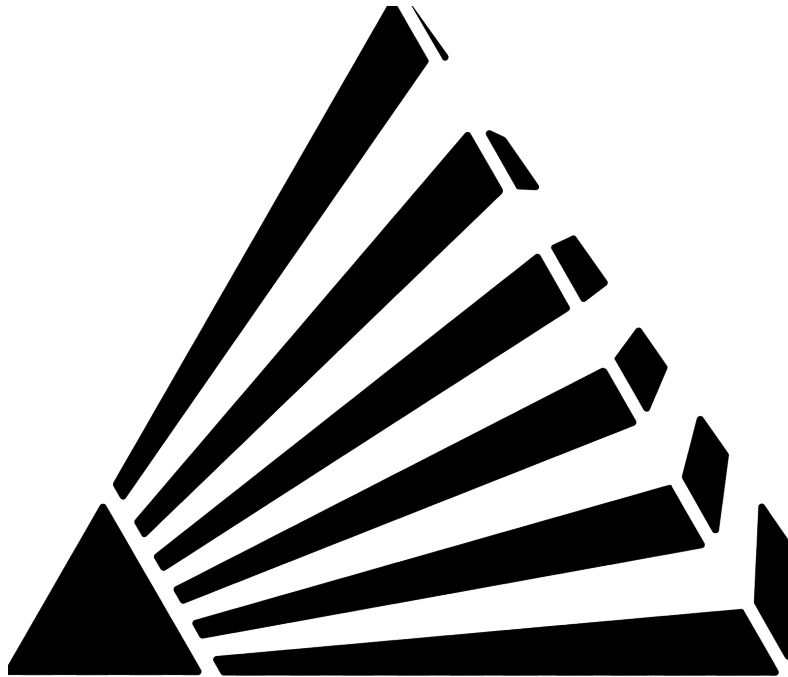

Full Spectrum
LASER

6216 S Sandhill Rd, Las Vegas, NV 89120
(702) 802-3100
www.fslaser.com












Full Spectrum
LASER

Technical support is available from 8am - 5pm PST, Monday -Friday
support@fslaser.com
(702) 802-3103



MUSE GALVO HEAD ASSEMBLY INSTRUCTIONS

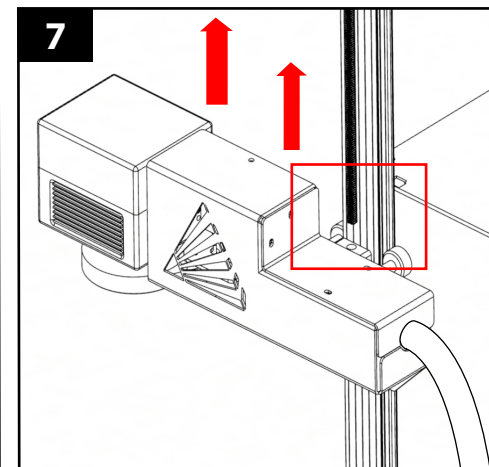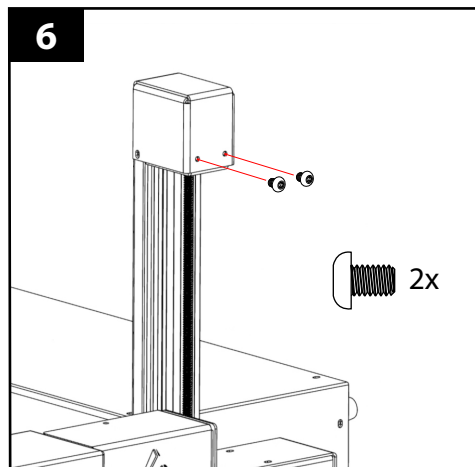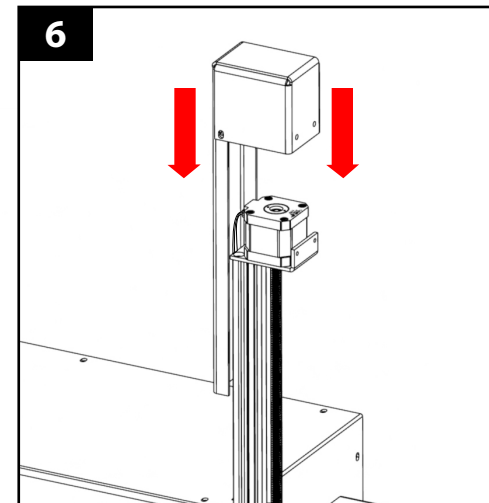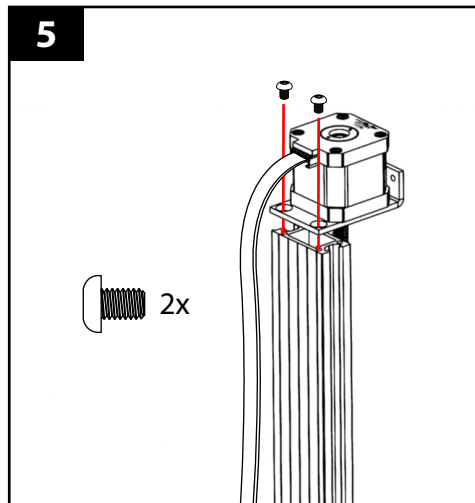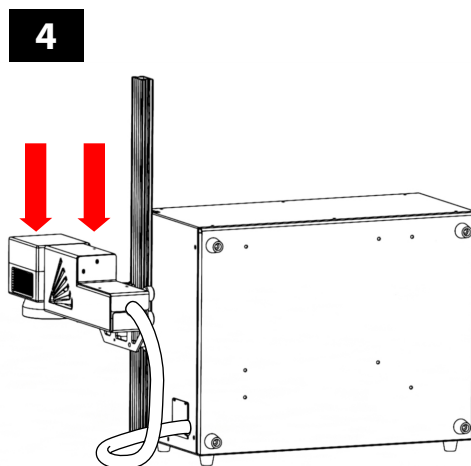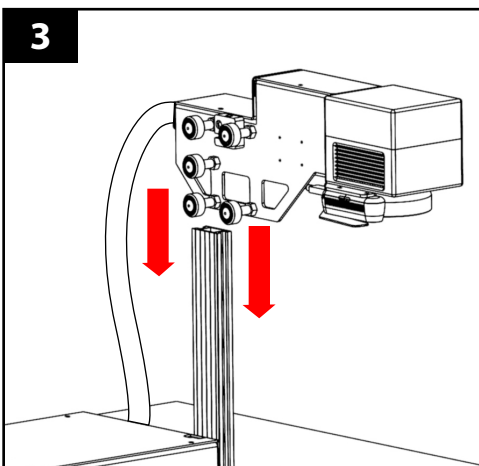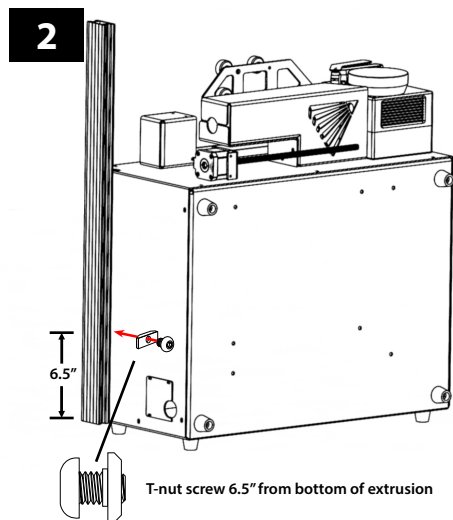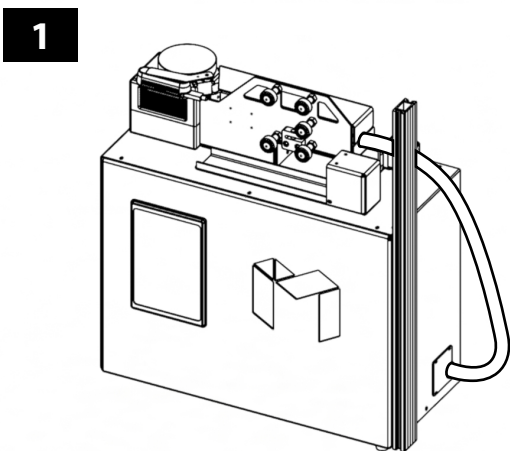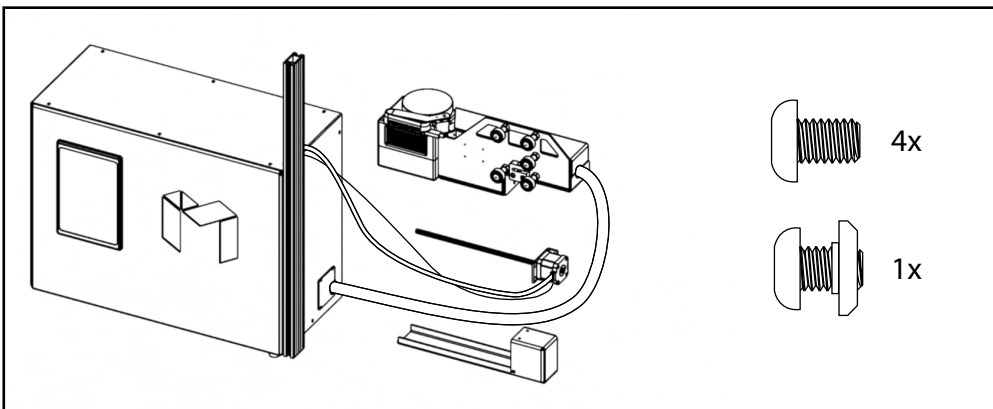

8 Hold Z-Car up against the threaded rod, press **HOME LASER**, and allow the rod to bite and raise the Z-Car. Press **HOME LASER** again until the laser head reaches the top and stops.

