



# LOW PROFILE ROTARY QUICKSTART

## Adjusting Rotary:

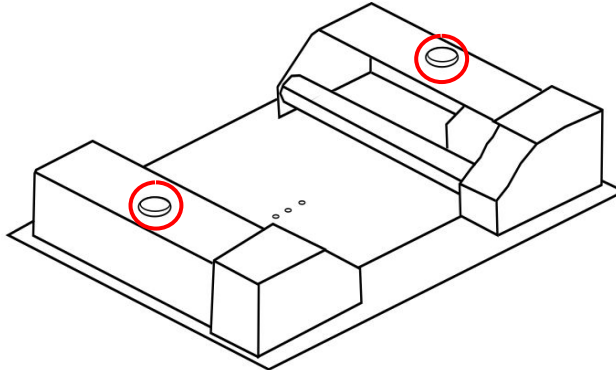

1. On top of the rotary there are two M5 screws.
2. Loosen one of the screws to adjust the rotary using the slots.

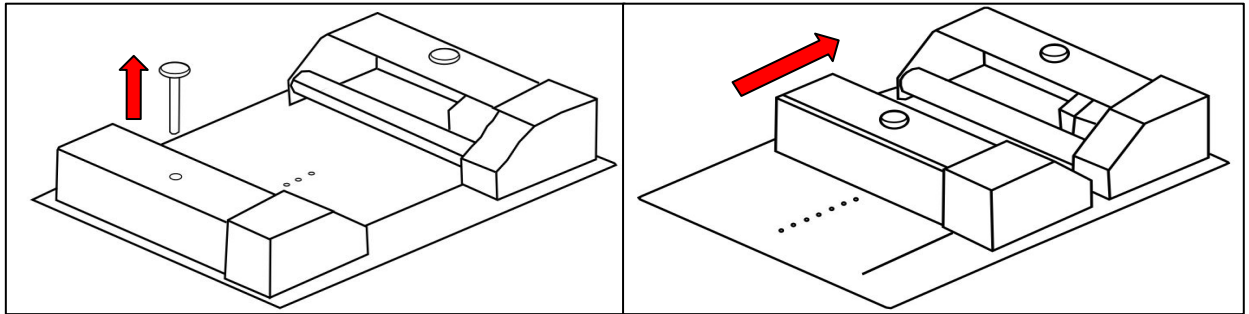

3. Once in the desired position. Re-tighten the screws to the base plate.
4. Double-check to make sure the two halves of the rotary are fully seated in the slots before starting a job.

## Using Rotary Jack:

1. Some objects may need the rotary jack to elevate one end so that the surface is parallel to the laser.
2. The laser can be adjusted by twisting the knob clockwise to raise it and counterclockwise to lower it.
3. Make sure the jack is parallel to the rotary to prevent your object from slipping.

